



INSTRUCTION SHEET

AUGUST, 1991

CLASS 9001, TYPE K25, K26, K27 and K28 STAINLESS STEEL FLUSH-PLATE KITS

For mounting one to four control units in commercial pull boxes

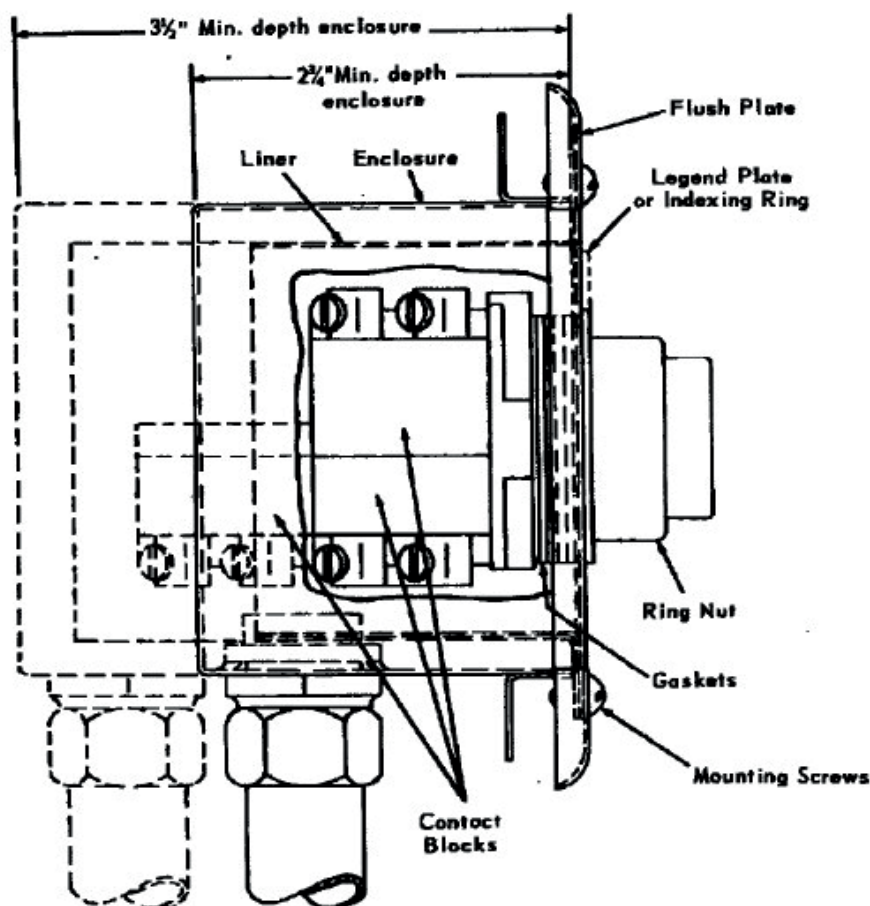


FIGURE 1
Pull Box Assembly

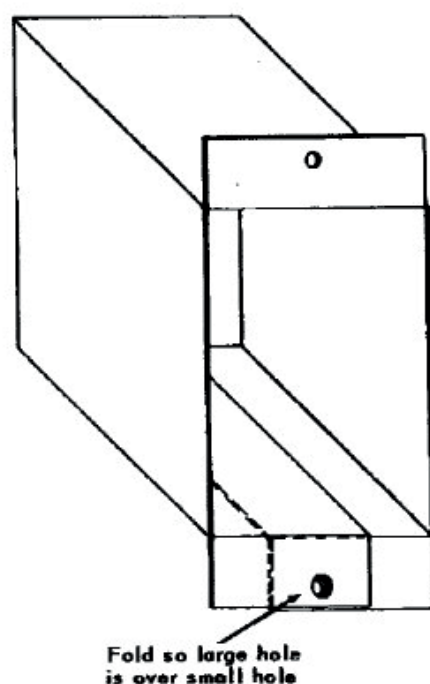


FIGURE 2
Liner

NOTE:

When mounting one contact block, (Class 9001 Type TA, TB, or KA), use pull box (similar to Appleton #333) with $2\frac{3}{4}$ " minimum depth.

When mounting two contact blocks (Class 9001 Type KA) in tandem, use pull box (similar to Appleton #336) with $3\frac{1}{2}$ " minimum depth. Use deep liner for tandem mounted blocks.

INSTALLATION

1. Install contact blocks to operator.
2. Wire contact blocks.
3. Install operator to flush plate. (Use adapter ring if mounting a Type T operator)
4. Fold liner (See Figure 2) and attach to flush plate with mounting screws.
5. Attach flush plate assembly to enclosure.

SQUARE D®

30072-100-05C

30072-100-05C